

Basil Manual


Note:

If Basil boots and animates a sequence of 2 flashes near the FREEZE button and the lights on the left side of the module pointing down, it requires the V/OCT input to be re-calibrated. This can happen when the power rails in your system are balanced differently than in the previous modular case.

To calibrate: Plug a patch cable from R OUT to V/OCT, wait for a few seconds and then disconnect the cable. Basil will boot to normal operation.


Architecture

LEFT

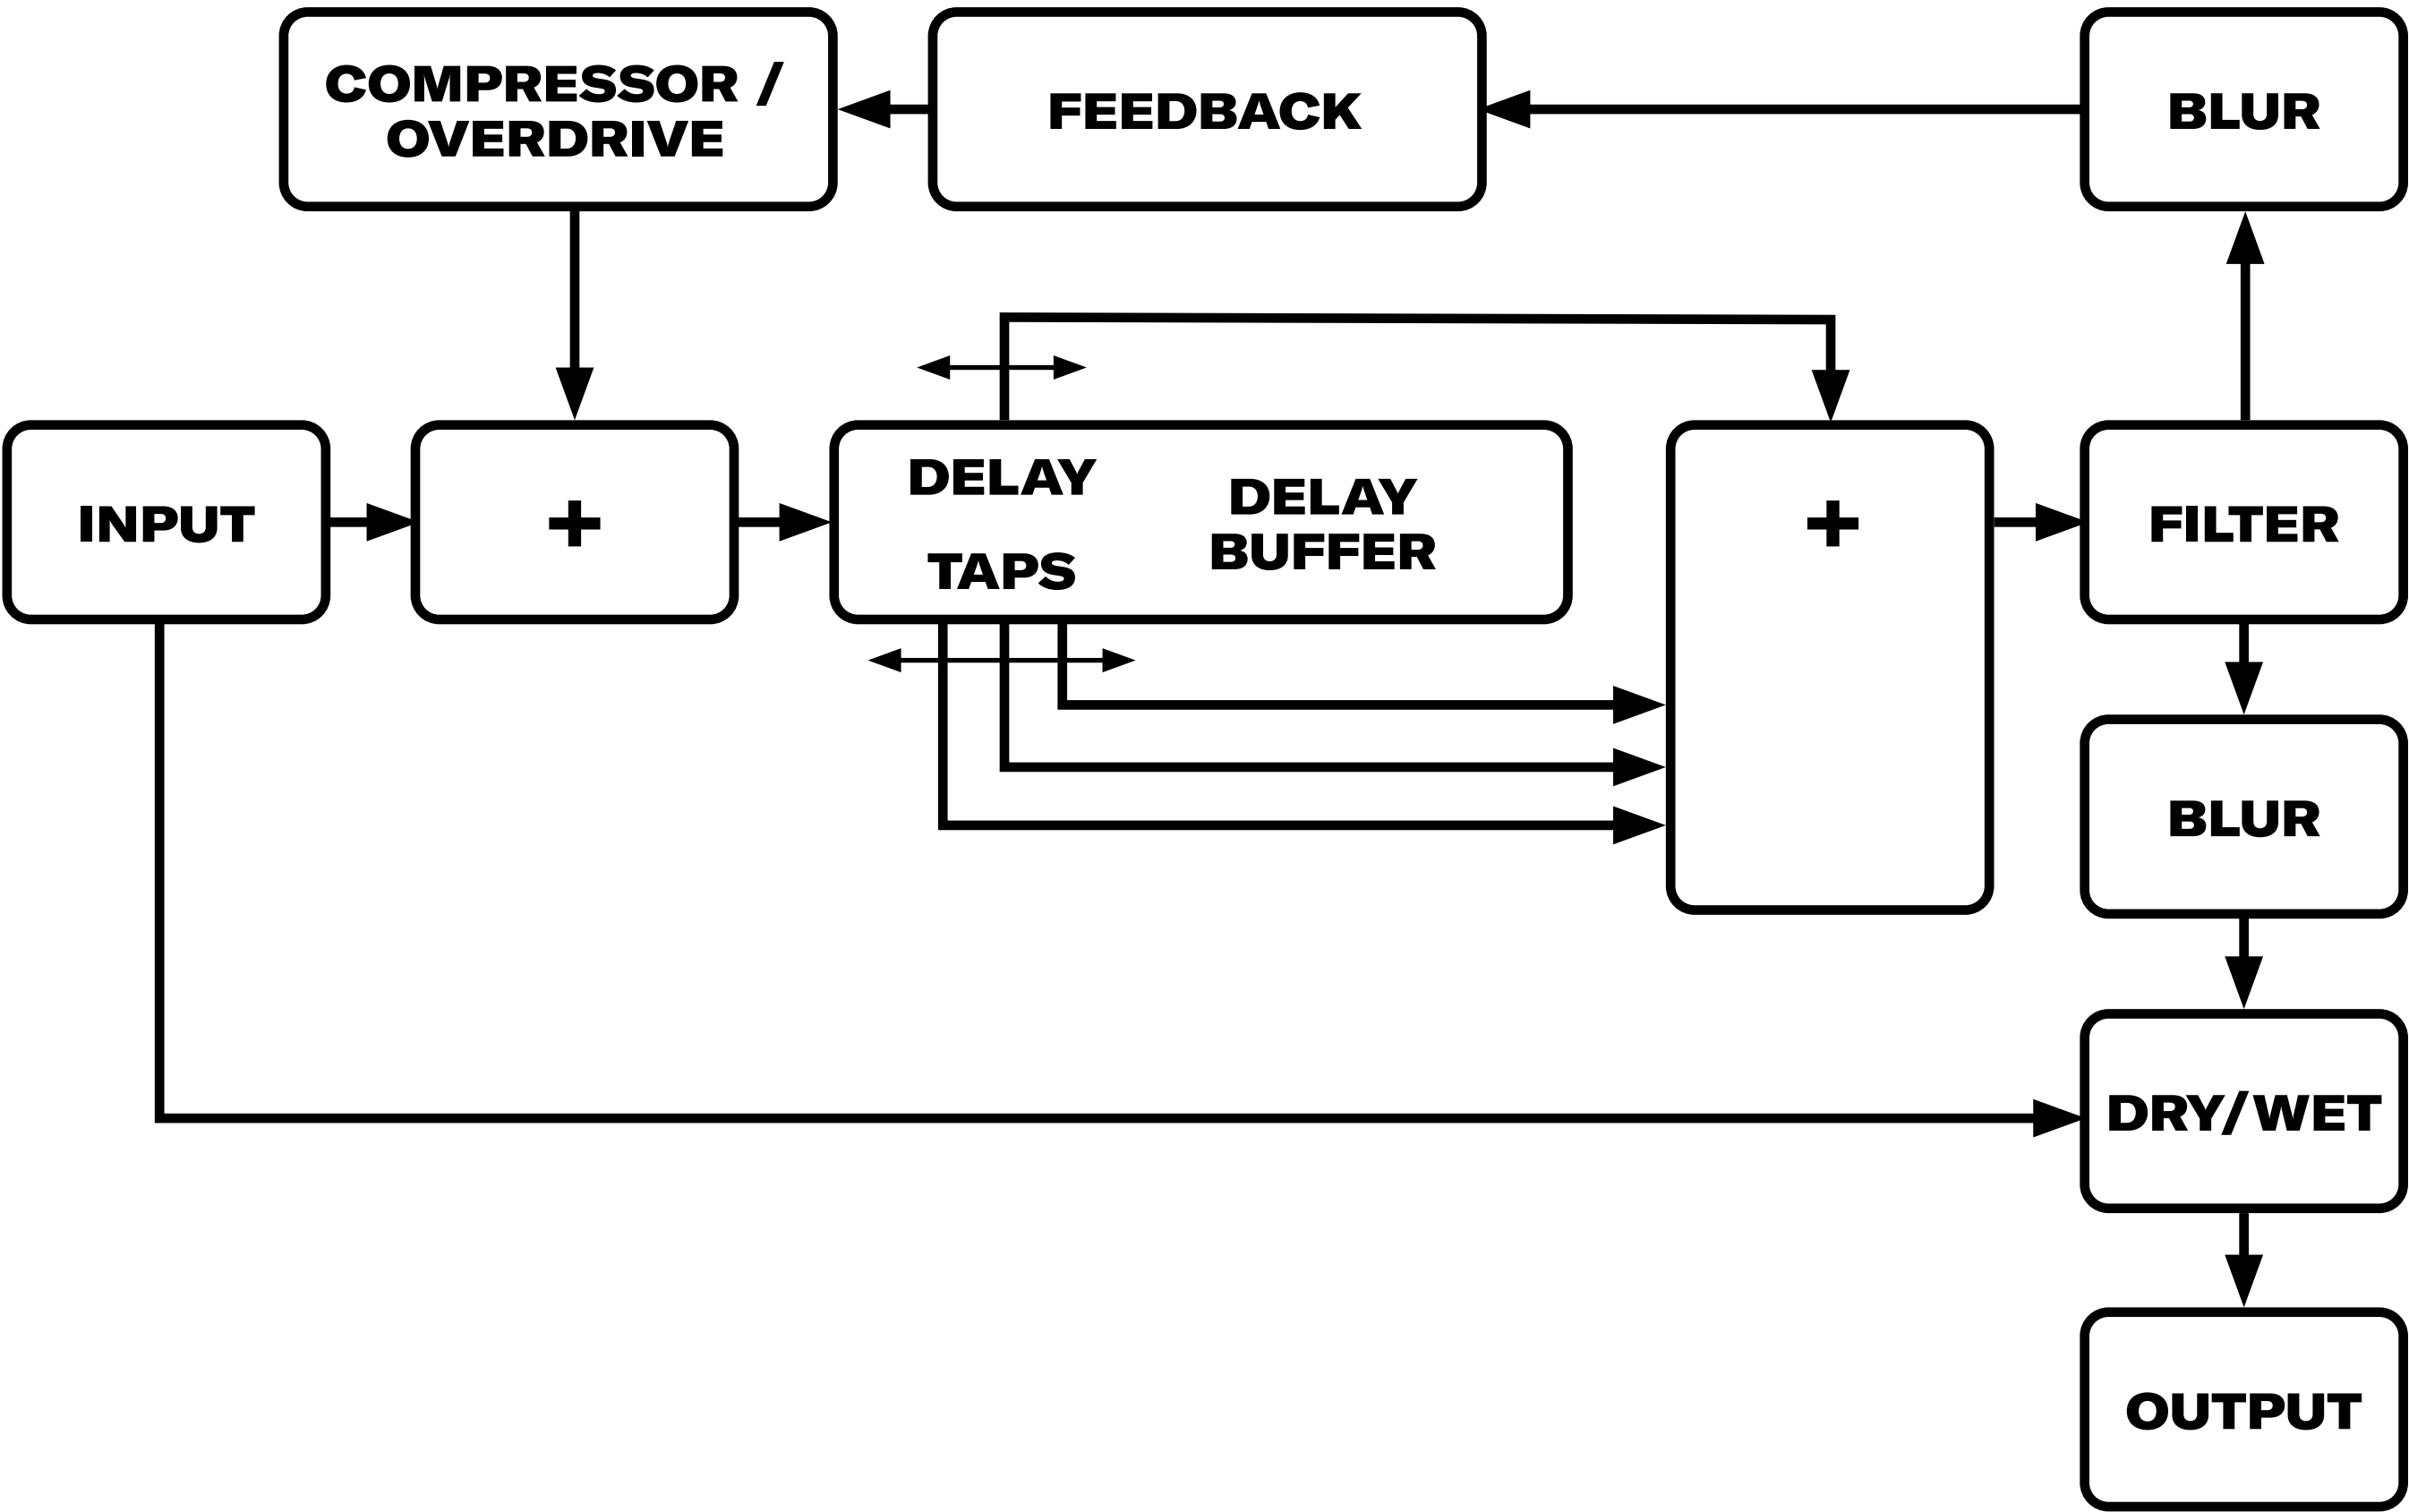

RIGHT

Left is normalized
if Right not connected

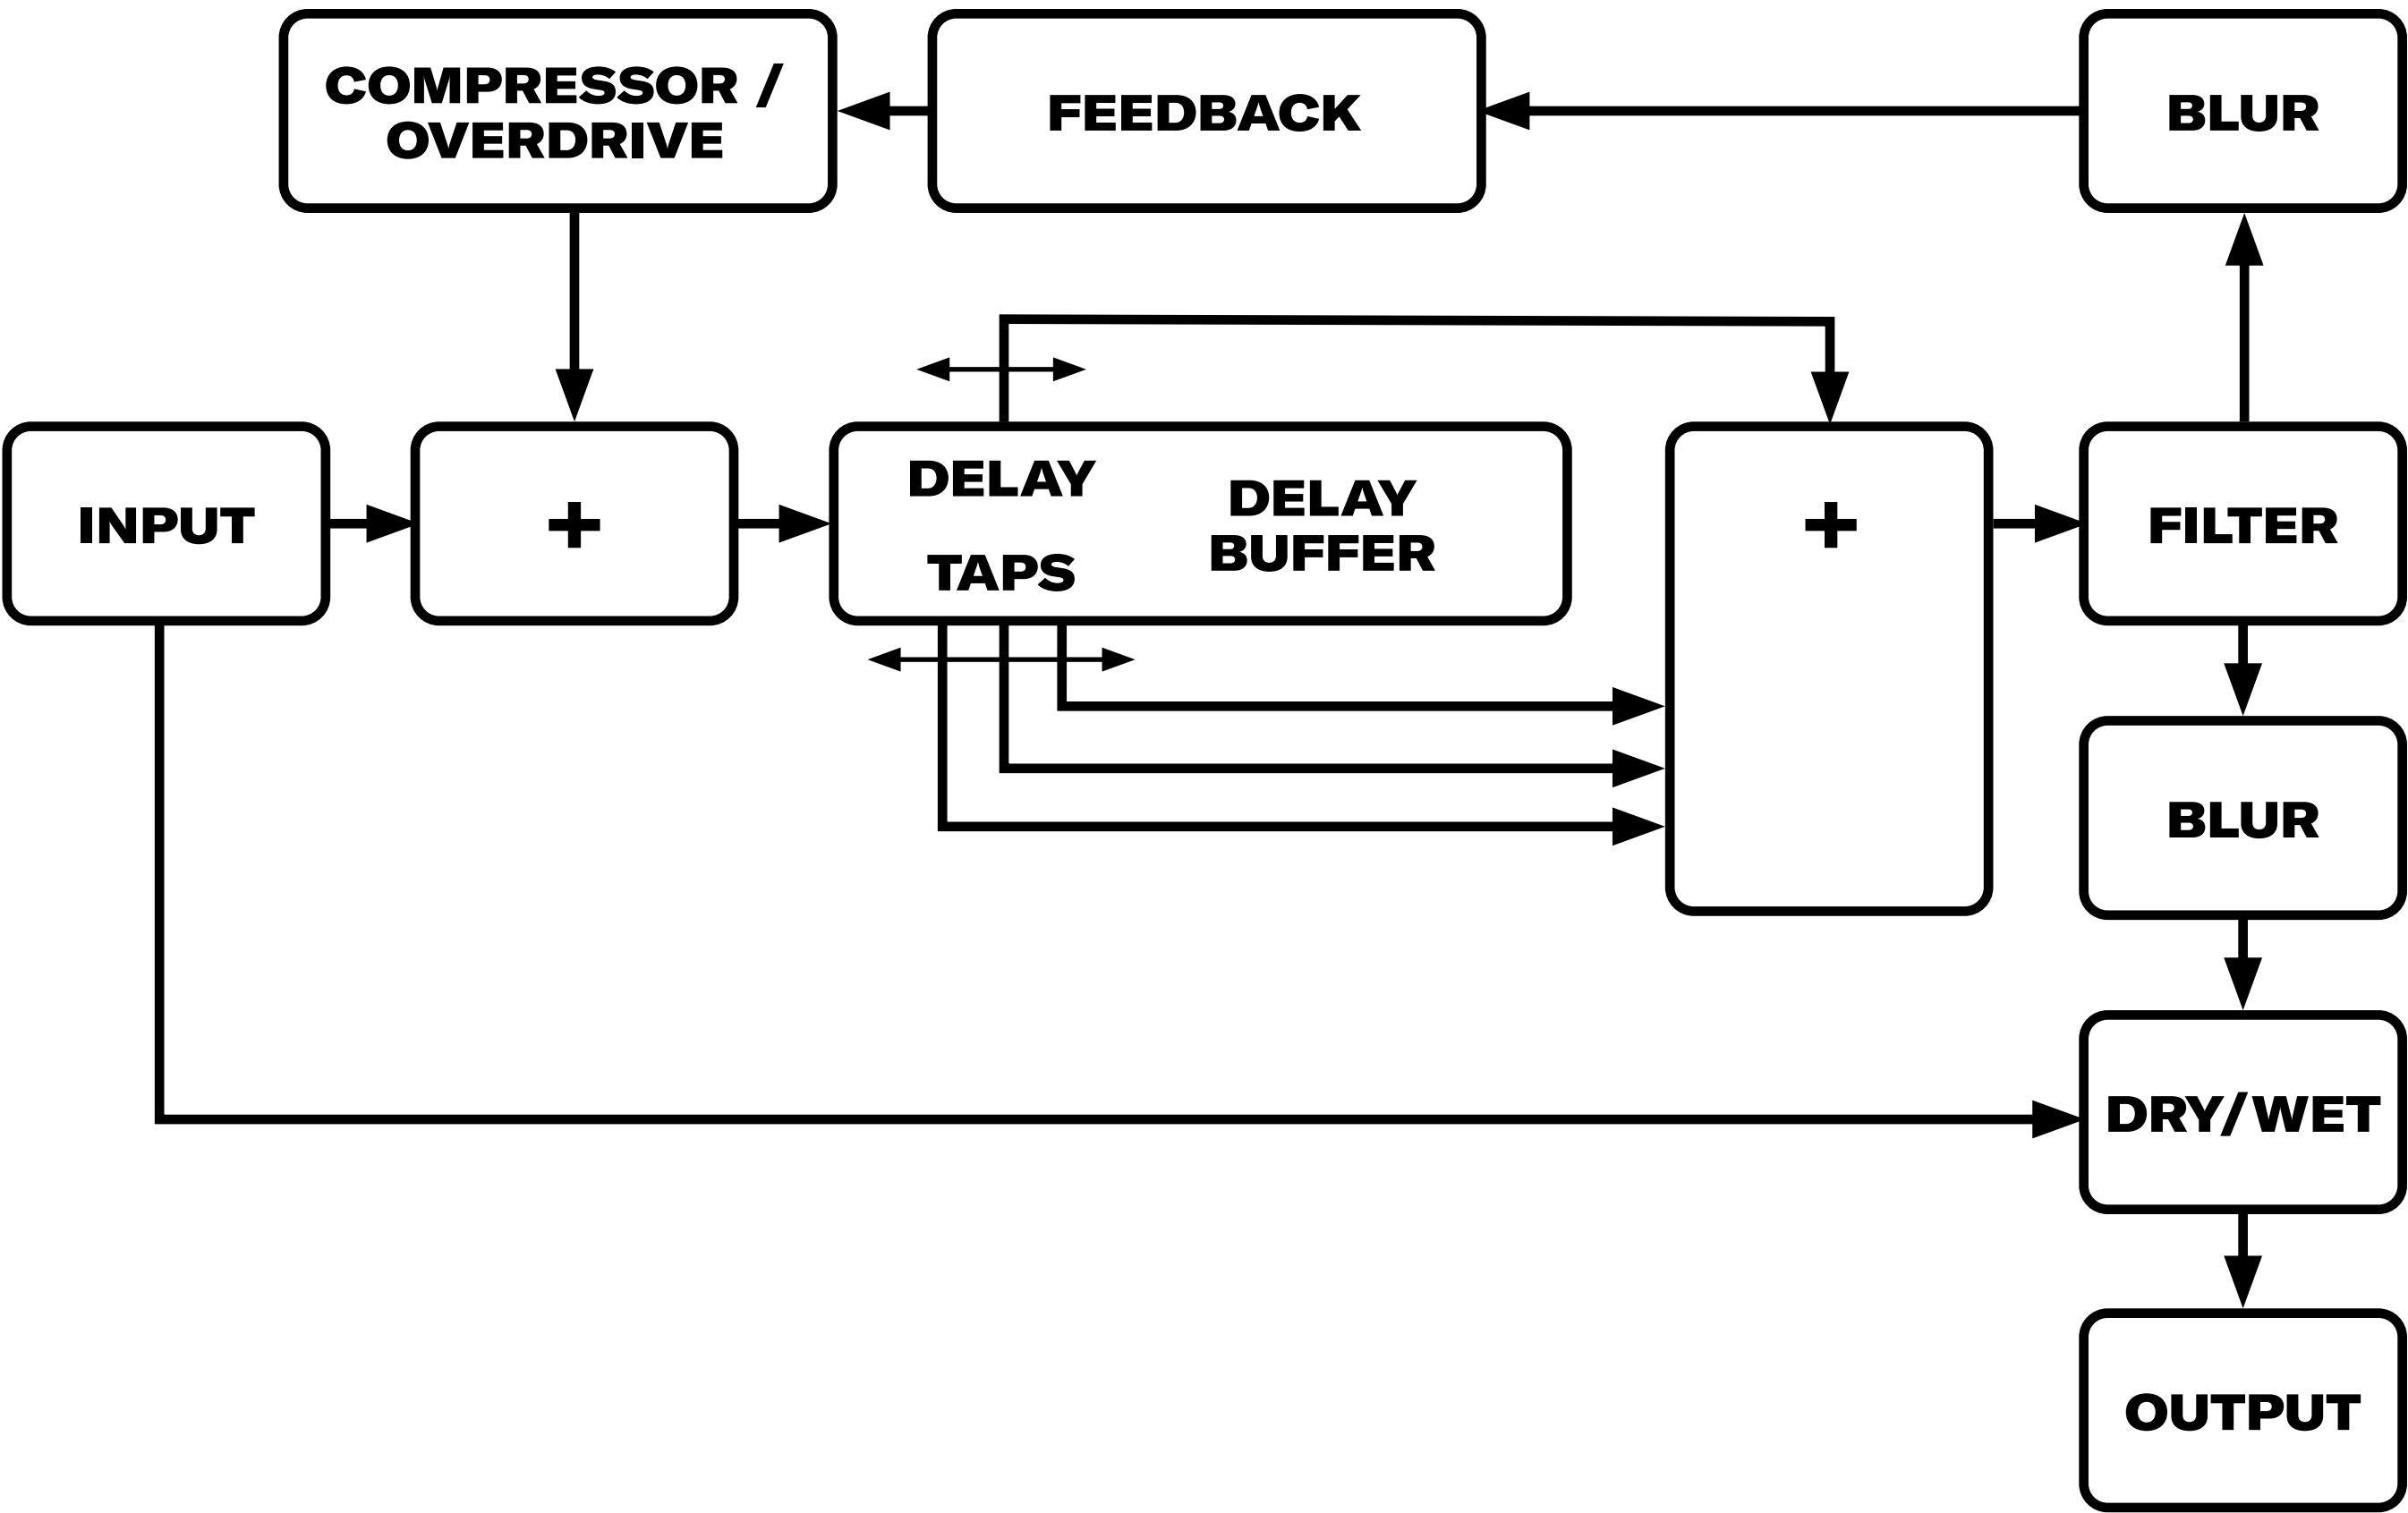

BASTL

more info
and video tutorials

www.bastl-instruments.com

