




MOULDED CABINET LOUDSPEAKERS

PBC10/TCOAXC


PBC10/TCOAX

Installation instructions


unit: mm

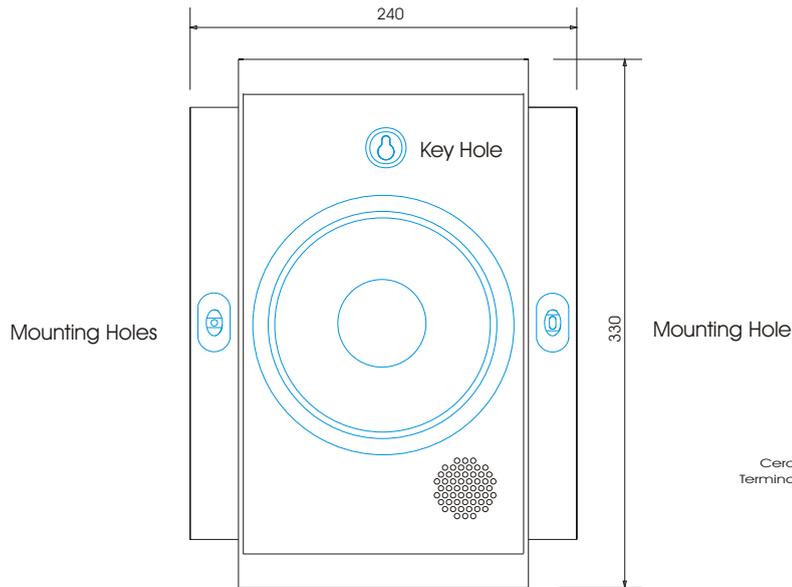


Front View

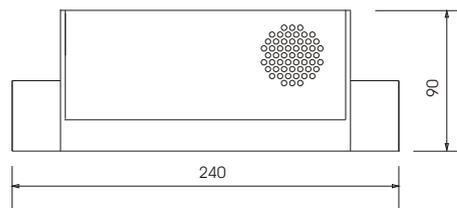

Top View

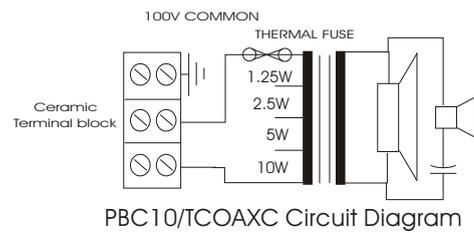

PBC10/TCOAXC Circuit Diagram

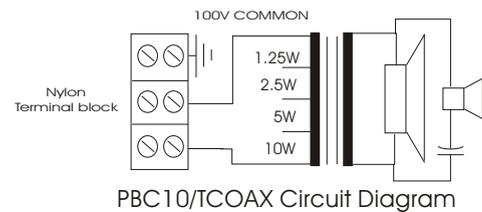

PBC10/TCOAX Circuit Diagram

1. On selecting the chosen location for the loudspeaker, it can be positioned vertically or horizontally) use a spirit level to ensure that it is level.
2. Offer the speaker to the wall or ceiling and mark through the mounting holes, as shown on the drawing above, the position required for drilling.
3. Drill 2 holes 210mm apart and then raw plug them.
4. Cabling can now take place, connect the 100 volt line supply to your required volume, as shown on the circuit diagram.
5. With the cable in place the speaker can be screwed through the mounting holes into position. Once in position, the two mounting hole caps can be fitted to hide the fixings.
6. There is also provided a key hole mounting plate, as shown on the drawing, this can only be used if the loudspeaker is wall mounted and in a vertical position